


Nixplay Original 18 Inch Quick Start Guide

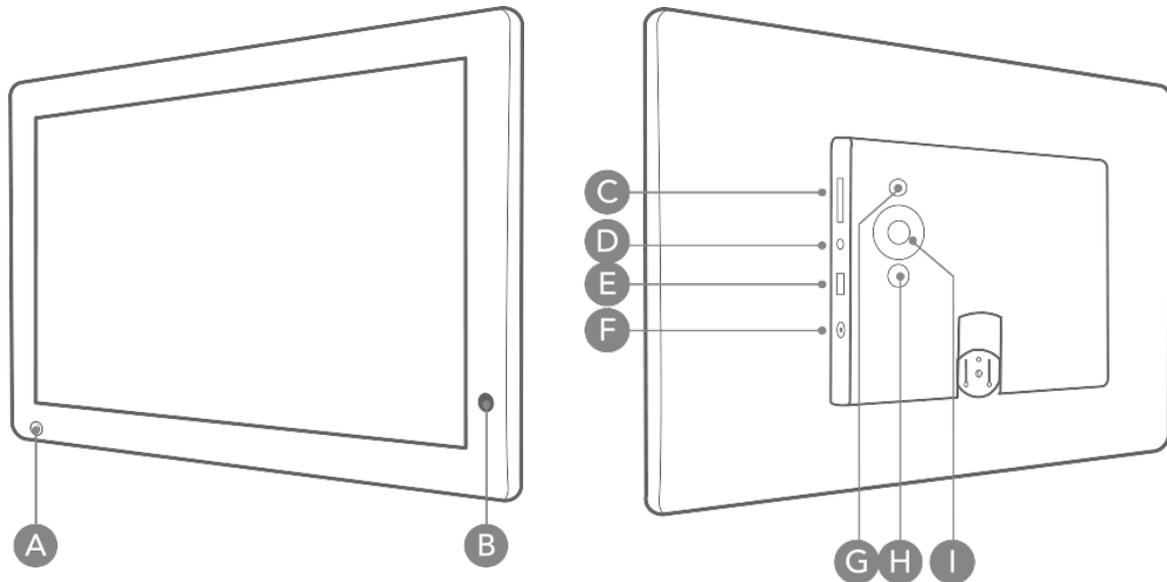

Get to know your frame

A) Motion Sensor

Senses movement and turns the Cloud Frame on and off

B) Infra-red Sensor

Receives signals from the remote

C) SD Card Slot

Connect your memory card and view photos

D) Headphone/Speaker Port

Connect your headphones or speakers

E) USB Port

Connect your USB flash drives and view photos

F) Power Adapter DC-in (12V) -

Plug in the power cable and connect to an electricity source

G) ON/OFF Button


Press and hold to turn the Cloud Frame on or off

H) Menu Button

This will allow you to go back a step in the menu


I) 4-way Menu Control & PLAY Button

Lets you navigate the menu and select specific photos

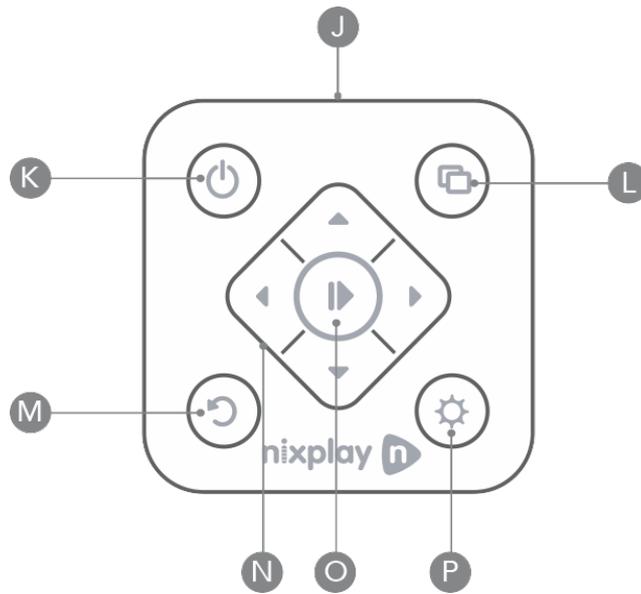


Remote Control

- J) Infra-red Transmitter
- K) On / Off
- L) Display Playlists (Photos only)
- M) Back
- N) Navigation Menu
- O) Select / Play / Pause
- P) Settings

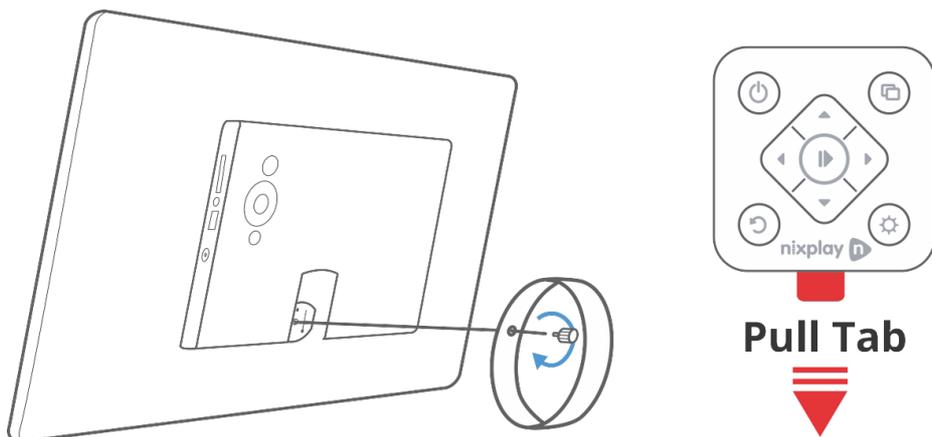


Assemble Cloud Frame: Screw in stand.

* **IMPORTANT:** Place the frame next to a computer for the set-up process.

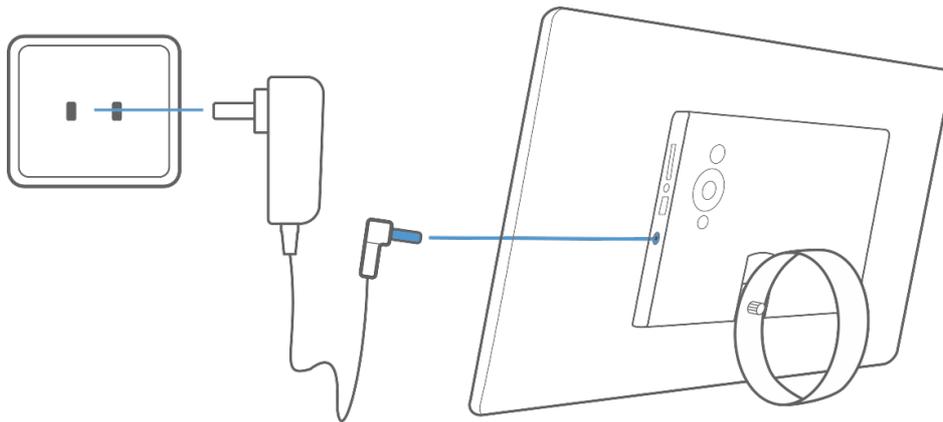

Plug in power adaptor to frame and power source.

Once plugged in, the frame will automatically start up. Please be patient as it may take a minute to load.

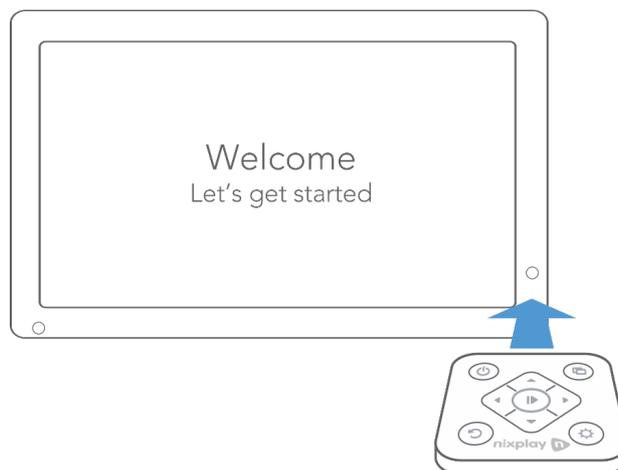

To control the activity of the frame, point the remote control as shown, towards the Infra-red Receiver. A welcome message will appear. Using the remote, press **▶** to continue.



Using the remote, select your Wi-Fi network, enter the associated Wi-Fi password and select Connect.



Once your frame is connected to Wi-Fi, follow the screen display.

Visit www.nixplay.com/setup using a desktop, laptop or a tablet. Select SIGN UP to create your Nixplay account. Select LOG IN to pair this device to an existing account.

Support

If you need help or have any questions, please contact our Support Team at <https://support.nixplay.com>.

Warranty

This Cloud Frame comes with a full one-year Manufacturer's Warranty. You do not need to register your warranty. In the event your Cloud Frame requires any servicing, please contact us at support.nixplay.com.

Please provide a copy of your original order information as proof of purchase.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

www.nixplay.com

 support.nixplay.com

 support@nixplay.com